




Use And Care

G U I D E

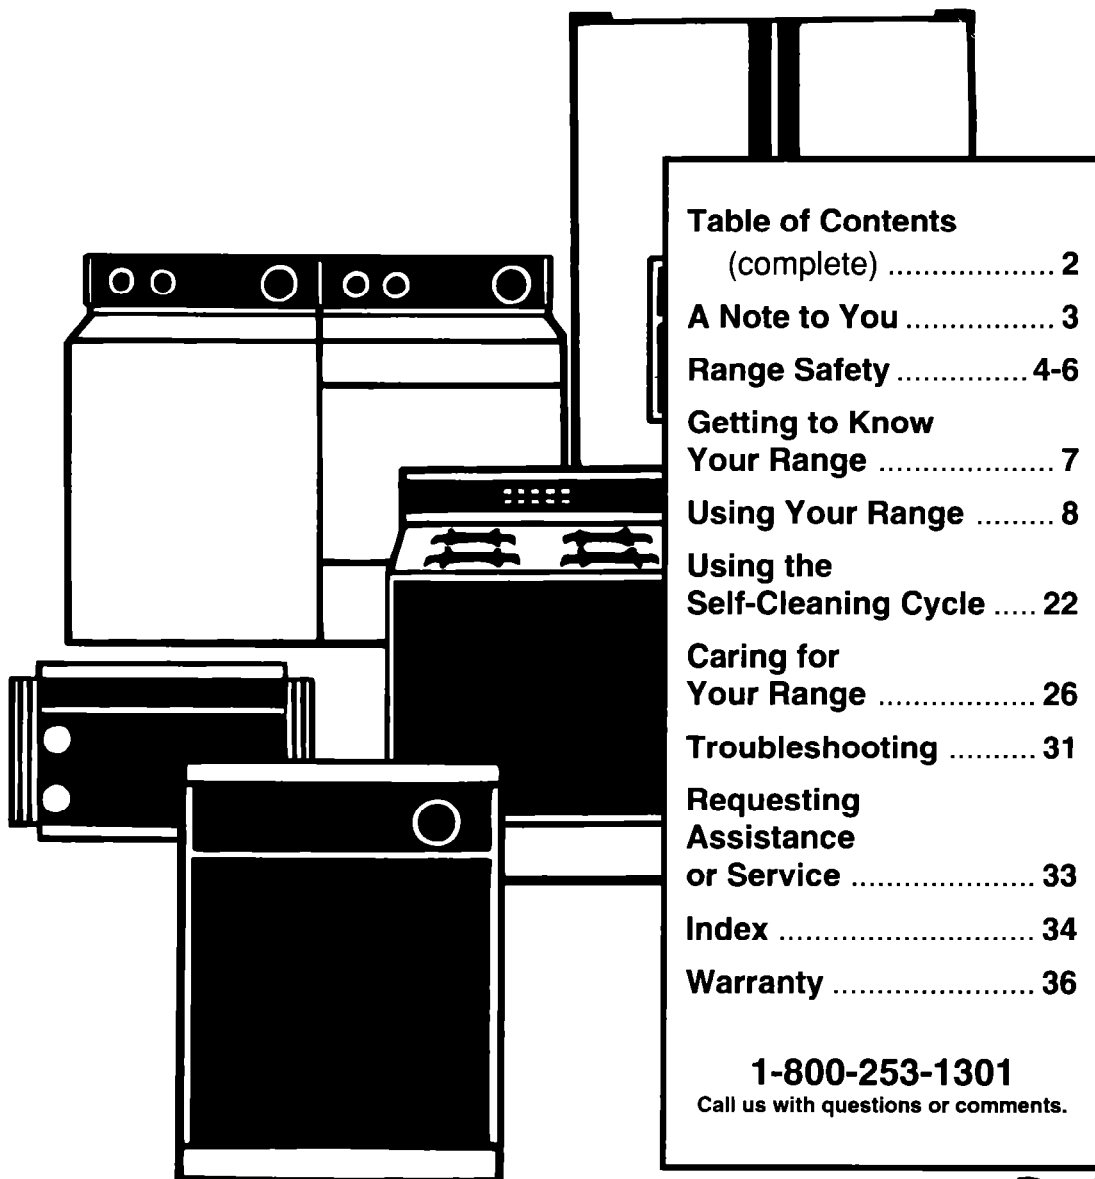

SELF-CLEANING ELECTRIC RANGE

12-95

Table of Contents

A Note to You	3	The storage drawer	20
Range Safety	4-6	The anti-tip bracket	21
Getting to Know Your Range	7	Optional door panel pac	21
Using Your Range	8	Using the Self-Cleaning Cycle	22
Using the surface units	8	Before you start	22
Positioning racks and pans	10	Setting the controls	23
For best air circulation	10	Special tips	25
Using aluminum foil for baking	11	How the cycle works	25
Setting the clock	12	Caring for Your Range	26
Using the Minute Timer	12	Surface units and reflector bowls	26
Baking/roasting	13	Lift-up cooktop	28
Adjusting the oven temperature control	14	Cleaning chart	28
Broiling	15	The oven light	30
Broiling tips	17	Troubleshooting	31
Energy saving tips	17	Requesting Assistance or Service	33
Using the MEALTIMER™ clock	18	Index	34
The oven vent	20	Warranty	36

A Note to You

Thank you for buying an ESTATE® appliance.

Your ESTATE range gives you all the functionality of name brand appliances at a value price. To ensure that you enjoy years of trouble-free operation, we developed this Use and Care Guide. It is full of valuable information about how to operate and maintain your appliance properly and safely. Please read it carefully. Also, please complete and mail the Ownership Registration Card provided with your appliance. This will help us notify you about any new information on your appliance.

Please record your model's information.

Whenever you call to request service for your appliance, you need to know your complete model number and serial number. You can find this information on the model and serial number plate (see diagram on page 7 for location of plate).

Please also record the purchase date of your appliance and your dealer's name, address, and telephone number.

Model Number _____

Serial Number _____

Purchase Date _____

Dealer Name _____

Dealer Address _____

Dealer Phone _____

Keep this book and the sales slip together in a safe place for future reference.

**Our Consumer Assistance Center
number is toll-free 24 hours a day.**

1-800-253-1301

Range Safety

Your safety is important to us.

This guide contains safety statements under warning symbols. Please pay special attention to these symbols and follow any instructions given. Here is a brief explanation of the use of the symbol.

WARNING

This symbol alerts you to such dangers as fire, electrical shock, burns, and personal injury.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electrical shock, injury to persons, or damage when using the range, follow basic precautions, including the following:

General

- Read all instructions before using the range.
- Install or locate the range only in accordance with the provided Installation Instructions. The range must be installed by a qualified installer. The range must be properly connected to electrical supply and grounded.



- **WARNING:** To reduce the risk of tipping the appliance, the appliance must be secured by a properly installed anti-tip bracket. To check if the bracket is installed properly, see "The anti-tip bracket" on page 21.
- **CAUTION:** Do not store things children might want above the range. Children could be burned or injured while climbing on it.
- Do not leave children alone or unattended in area where the range is in use. They should

never be allowed to sit or stand on any part of the range. They could be burned or injured.

- Do not operate the range if it is damaged or not working properly.
- Do not use the range for warming or heating the room. Persons could be burned or injured, or a fire could start.
- Use the range only for its intended use as described in this manual.



- Do not touch surface units, areas near units, heating elements, or interior surfaces of oven. Surface units and heating elements may be hot even though they are dark in color. Areas near surface units and interior surfaces of an oven become hot enough to cause burns. During and after use, do not touch or let clothing or other flammable materials contact surface units, areas near units,

heating elements, or interior surfaces of oven until they have had sufficient time to cool. Other surfaces of the range, such as the oven vent opening, the surface near the vent opening, the cooktop, and the oven door and window, could also become hot enough to cause burns.



- Do not wear loose or hanging garments when using the range. They could ignite if they touch a hot surface unit and you could be burned.
- Use only dry pot holders. Moist or damp pot holders on hot surfaces could result in burns from steam. Do not let pot holder touch hot heating elements. Do not use a towel or bulky cloth for a pot holder. It could catch on fire.
- Keep range vents unobstructed.
- Do not heat unopened containers. They could explode. The hot contents could cause burns and container particles could cause injury.
- Use only utensils approved for oven use. Follow utensil manufacturer's instructions, especially when using glass or plastic utensils.
- Do not store flammable materials on or near the range. The fumes could create an explosion and/or fire hazard.

When using the cooktop

- Make sure the reflector bowls are in place during cooking. Cooking without reflector bowls could subject the wiring and components underneath them to damage.
- Do not line reflector bowls with aluminum foil or other liners. Improper installation of these liners could result in a risk of electric shock or fire.
- Select a pan with a flat bottom that is about the same size as the surface unit. If pan is smaller than the surface unit, some of the heating element will be exposed and could result in the igniting of clothing or pot holders. Correct pan size also improves cooking efficiency.
- Check to be sure glass cooking utensils are safe for use on the range. Only certain types of glass, glass-ceramic, ceramic, earthenware, or other glazed utensils are suitable for cooktops without breaking due to the sudden change in temperature.
- Never leave surface units unattended at high heat settings. A boilover could result and cause smoking and greasy spillovers that could ignite.



- Turn pan handles inward, but not over other surface units. This will help reduce the chance of burns, igniting of flammable materials, and spills due to bumping of the pan.

RANGE SAFETY

When using the oven

- Always position oven rack(s) in desired location while oven is cool. If a rack must be removed while oven is hot, do not let pot holder contact hot heating element in oven.
- Use care when opening oven door. Let hot air or steam escape before removing or replacing food.

Grease

- Grease is flammable. Do not allow grease to collect around cooktop or in vents. Wipe spills immediately.



- Do not use water on grease fires. Never pick up a flaming pan. Smother flaming pan on range by covering with a well-fitted lid, cookie sheet, or flat tray. Flaming grease outside of pan can be extinguished with baking soda or, if available, a multipurpose dry chemical or foam-type extinguisher.

Care and cleaning

- Small amounts of formaldehyde and carbon monoxide are given off in the Self-Cleaning cycle from fiberglass insulation and food decomposition. Significant exposure to these substances can

cause cancer or reproductive harm. Exposure can be minimized by venting with a hood or open window and wiping out excess food spills prior to self-cleaning.




- Do not use oven cleaners. No commercial oven cleaner or oven liner protective coating of any kind should be used in or around any part of the oven.
- Before self-cleaning the oven, remove broiler pan, broiler grid, oven racks, and other utensils. Do not use your oven to clean miscellaneous parts unless you are instructed to do so in this Use and Care Guide.
- Do not soak removable heating elements in water. The element will be damaged and shock or fire could result.
- Do not clean door heat seal. It is essential for a good seal. Care should be taken not to rub, damage, or move the seal. Clean only parts recommended in this Use and Care Guide.
- Do not repair or replace any part of the range unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- Disconnect the electrical supply before servicing the range.


– SAVE THESE INSTRUCTIONS –

Getting to Know Your Range

This section contains captioned illustrations of your range. Use them to become familiar with the location and appearance of all parts and features. To help you find information on specific parts and features quickly, page references are included.

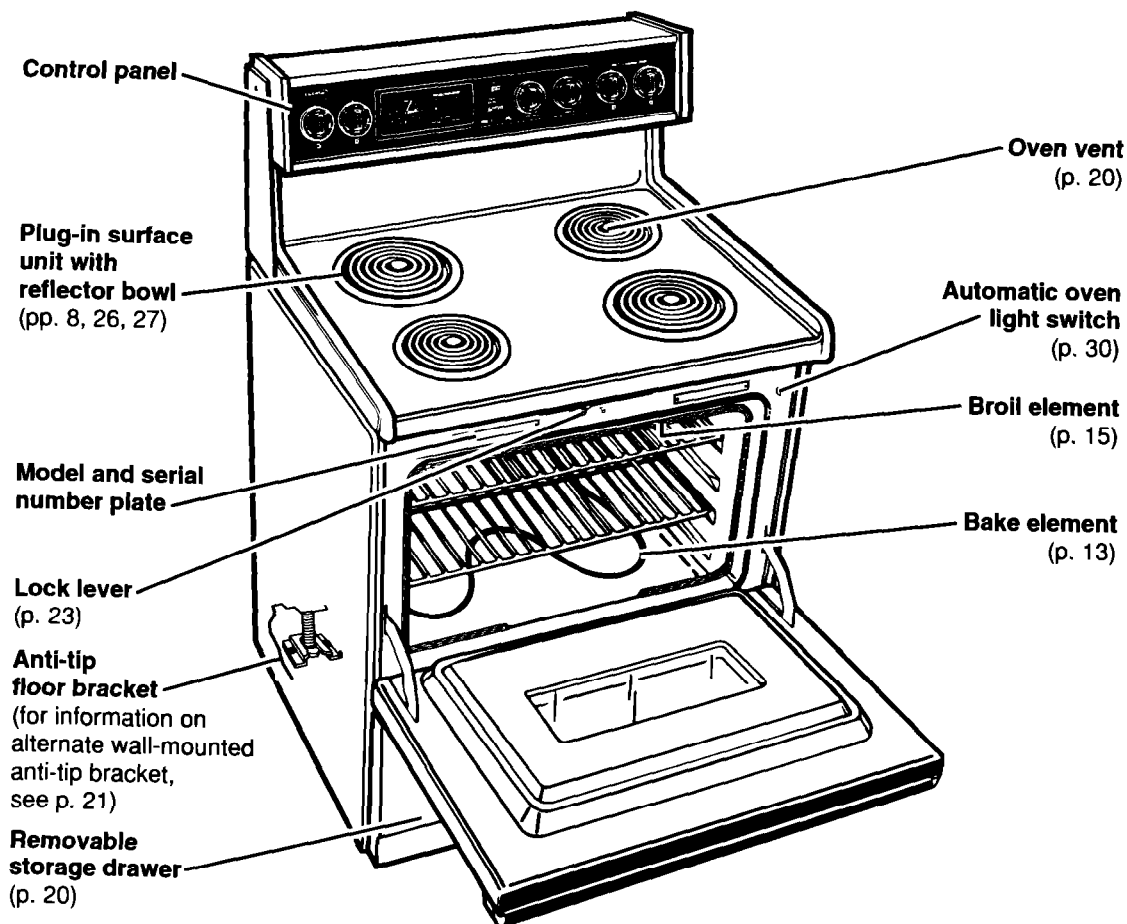


Control panel

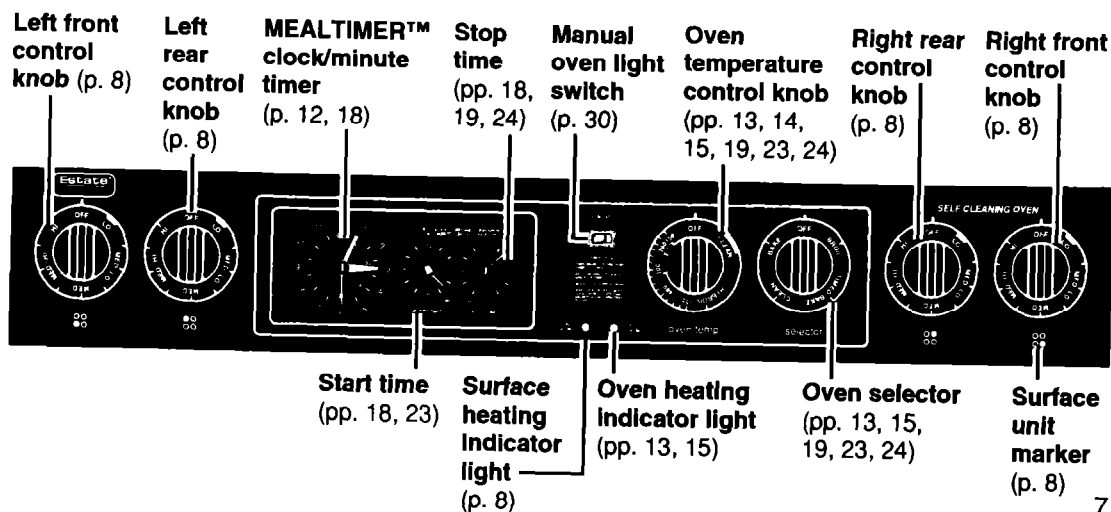

Using Your Range

To obtain the best cooking results possible, you must operate your range properly. This section gives you important information for efficient and safe use of your range.


Using the surface units

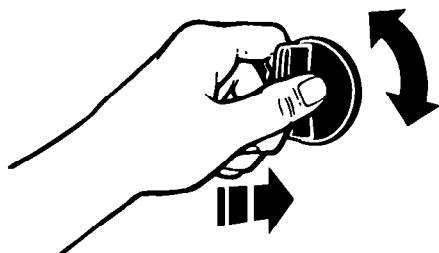

Push in control knobs before turning them to a setting. You can set them anywhere between HI and OFF.

Surface unit markers

The solid dot in the surface unit marker shows which surface unit is turned on by that knob.

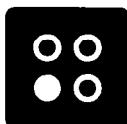

Surface heating indicator light

The SURFACE HEATING Indicator Light on the control panel will glow when a surface unit is on.



⚠ WARNING



Fire Hazard

Turn all controls off when done cooking.

Failure to do so can result in death, fire, or burns.


Until you get used to the settings, use the following as a guide. For best results, start cooking at the high setting; then turn the control knob down to continue cooking.

SETTING	RECOMMENDED USE
HI	<ul style="list-style-type: none">• To start foods cooking.• To bring liquids to a boil.
MED-HI	<ul style="list-style-type: none">• To hold a rapid boil.• To fry chicken or pancakes.
MED	<ul style="list-style-type: none">• For gravy, pudding and icing.• To cook large amounts of vegetables.
MED-LO	<ul style="list-style-type: none">• To keep food cooking after starting it on a higher setting.
LO	<ul style="list-style-type: none">• To keep food warm until ready to serve.

USING YOUR RANGE

Cookware tips

- **Select a pan** that is about the same size as the surface unit.

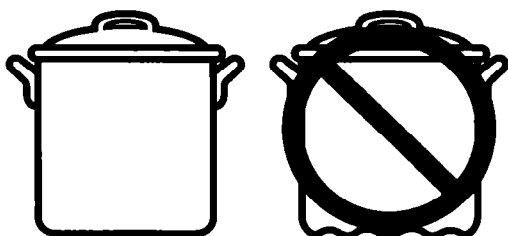

- **NOTE:** For best results and greater energy efficiency, use only flat-bottomed cookware that makes good contact with the surface units. Cookware with rounded, warped, ribbed (such as some porcelain enamelware), or dented bottoms could cause severe overheating, which damages the cookware and/or surface unit.

You can, however, use the newer cookware available with slightly indented bottoms or very small expansion channels. This cookware is specially designed to provide the good contact needed for best cooking results.

Also, woks, canners, and teakettles with flat bottoms suitable for use on your cooktop are now available in most stores that sell housewares.

- **The pan** should have straight sides and a tight-fitting lid.
- **Choose medium to heavy gauge** (thickness) pans that are fairly lightweight.
- **The pan material** (metal or glass) affects how fast heat transfers from the surface unit through the pan material and how evenly heat spreads over the pan bottom. Choose pans that provide the best cooking results.
- **Handles** should be made of sturdy, heat-resistant material and be securely attached to the pan.

NOTES:

- **If a surface unit** stays red for a long time, the bottom of the pan is not flat enough or is too small for the surface unit. Prolonged usage of incorrect utensils could result

in damage to the surface unit, cooktop, wiring, and surrounding areas. To prevent damage, use correct utensils, start cooking on HI, and turn control down to continue cooking.

- **Do not leave** an empty utensil, or one which has boiled dry, on a hot surface unit. The utensil could overheat and damage the utensil or surface unit.

Home canning information

To protect your range:

- **Use flat-bottomed canners/pans** for best results.
- **Use the largest surface unit** for best results. Also, use a canner/pan which can be centered over the surface unit and which does not extend more than 1 inch outside surface unit area. Large diameter canners/pans, if not properly centered, trap heat and can cause damage to the cooktop.



- **Do not place canner** on 2 surface units at the same time. Too much heat will build up and will damage the cooktop.
- **Start with hot water.** This reduces the time the control is set on HI. Reduce heat setting to lowest position needed to keep water boiling.
- **Keep reflector bowls clean** for best heat reflection.
- To prolong the life of the elements:
 - **Prepare small batches** at a time.
 - **Do not use elements** for canning all day.
- **Refer to your canner manual** for specific instructions.

USING YOUR RANGE

Optional canning kit

The large diameter of most water-bath or pressure canners combined with high heat settings for long periods of time can shorten the life of regular surface units and cause damage to the cooktop.

If you plan to use the cooktop for canning, we recommend the installation of a Canning Kit. Order the kit (Part No. 242905) from your Whirlpool dealer or authorized Whirlpool service company.

Positioning racks and pans

General guidelines

- **Always position oven rack(s)** in desired location before turning oven on.
- **To move rack(s)**, lift rack(s) at front and pull out.
- **Be sure** the rack(s) is level.
- **If rack(s) must be moved** while oven is hot, use pot holders or oven mitts to protect hands.
- **For baking/roasting with 1 rack**, place the rack so the top of the food will be centered in the oven.
- **When baking on 2 racks**, arrange racks on the bottom and third level from the bottom.


Rack placement for specific foods

FOOD	RACK POSITION
Frozen pies, large roasts, turkeys, angel food cakes	Lowest level or 2nd level from bottom
Bundt cakes, most quick breads, yeast breads, casseroles, meats	2nd level from bottom
Cookies, biscuits, muffins, cakes, nonfrozen pies	2nd or 3rd level from bottom

NOTE: For recommended rack placement when broiling, see "Broiling rack position chart" on page 16.

For best air circulation

Hot air must circulate around the pans in the oven for even heat to reach all parts of the oven. This results in better baking.

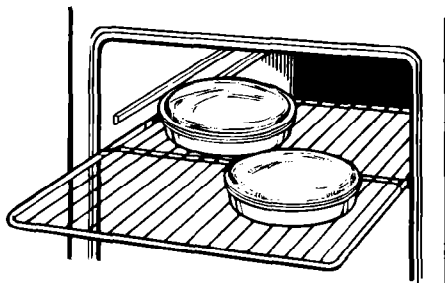

- **Place** the pans so that one is not directly over the other.

- **For best results, allow** 1½ to 2 inches (4-5 cm) of space around each pan and between pans and oven walls. There must be a minimum space of 1 inch (3 cm).
- **Use** only 1 cookie sheet in the oven at one time.

USING YOUR RANGE

Use the following as a guide to determine where to place the pans:

One pan

Place in the center of the oven rack.


Two pans

Place in opposite corners of the oven rack.

Three or 4 pans

Place in opposite corners on each oven rack. Stagger pans so no pan is directly over another.

Using aluminum foil for baking

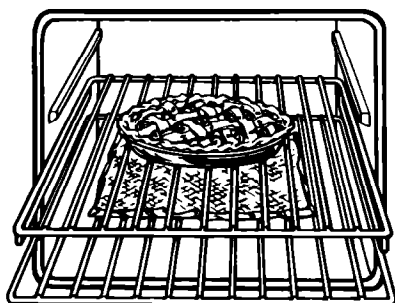

Use aluminum foil to catch spillovers from pies or casseroles:


- **Place** the foil on the oven rack below the rack with the food. **Turn up** foil edges and **make sure** foil is about 1 inch (3 cm) larger all around than the dish holding the food.
- **Do not cover** the entire rack with aluminum foil. It will reduce air circulation and cause poor cooking results.
- **Do not line** oven bottom or entire oven rack with foil or other liners. Poor baking will result.

USING YOUR RANGE

Setting the clock


Push in and turn the Minute Timer Knob to set the clock.

1. Push in Minute Timer Knob and turn clockwise until clock shows correct time of day.

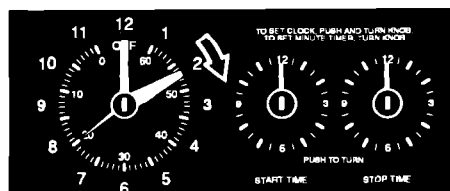

2. Let Minute Timer Knob pop out. Turn clockwise until Minute Timer hand points to OFF.

The clock setting will change if you push in the knob when turning.

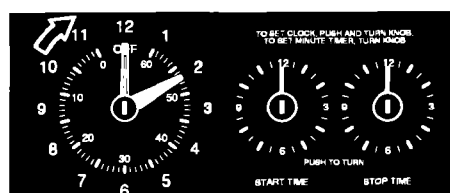


Using the Minute Timer

The Minute Timer does not start or stop the oven. It works like a kitchen timer. Set it in minutes up to an hour. You will hear a buzzer when the set time is up.


NOTE: Do not push in the knob when setting the Minute Timer, or when stopping the buzzer. Pushing in and turning the Minute Timer Knob changes the clock setting.

1. Without pushing it in, turn the Minute Timer Knob counter-clockwise until the timer hand passes the setting you want.

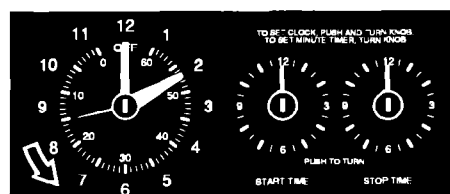

2. Without pushing it in, turn the knob back to the setting you want.


When the time is up, a buzzer will sound. To stop the buzzer, turn the Minute Timer hand to OFF.

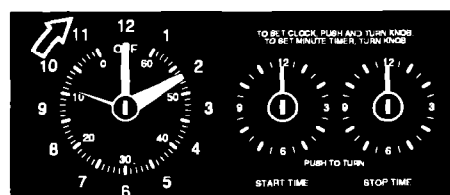

Baking/roasting

1. Position racks.


For more information, see "Positioning racks and pans" on page 10.

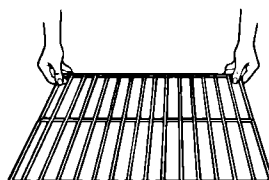

2. Set Oven Selector to BAKE and Oven Temperature Control to baking/roasting temperature you want.

The OVEN HEATING Indicator Light will come on. The oven is preheated when the OVEN HEATING Indicator Light first goes off.


NOTE: Do not preheat oven when roasting or cooking items such as casseroles.

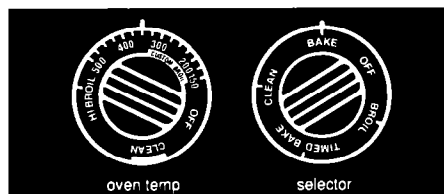

3. Put food in oven.


During baking/roasting, the elements will turn on and off to keep the oven temperature at the setting. The OVEN HEATING Indicator Light will turn on and off with the elements.

NOTE: The top element helps heat during baking/roasting, but does not turn red.

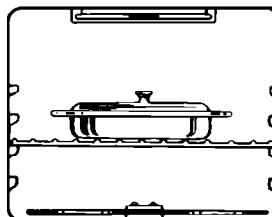

4. After cooking, turn off oven.

Turn both the Oven Selector and the Oven Temperature Control Knob to OFF. The OVEN HEATING Indicator Light will go off.

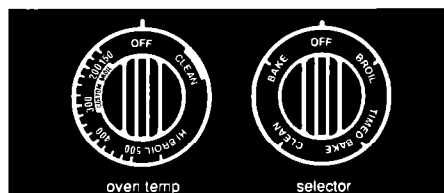


USING YOUR RANGE


Adjusting the oven temperature control

Although your new oven is properly adjusted to provide accurate temperatures, it may cook faster or slower than your old oven.

If, after using the oven for a period of time, you are not satisfied with the baking/roasting results, you can change the temperature calibration by following these steps:

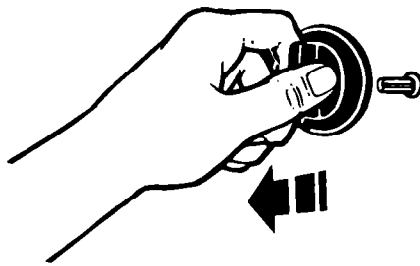

1. **Make sure** the Oven Temperature Control Knob is turned to the off position. **Pull** knob straight off and **flip** it over.

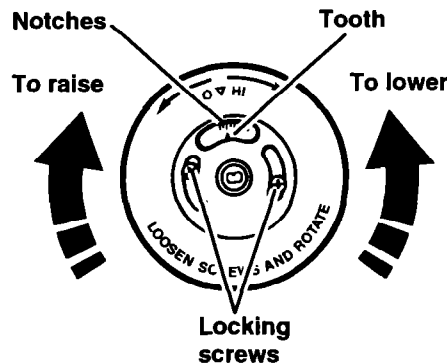

2. **Loosen** the locking screws inside the control knob. **Note the position of the notches.**

3. **To lower the temperature**, hold knob handle firmly and **move** the tooth a notch counterclockwise. Each notch equals about 5°F (2.5°C).

4. **To raise the temperature**, hold knob handle firmly and **move** the tooth a notch clockwise. Each notch equals about 5°F (2.5°C).

5. **Tighten** the locking screws and **replace** the control knob.

NOTE: DO NOT measure oven temperature with a thermometer. Opening the oven door will lower the oven temperature and give you an inaccurate reading. Also, the thermometer temperature reading will change as your oven cycles.


Broiling

NOTES:

- Do not preheat when broiling.
- The Oven Selector must be on **BROIL** for broiling temperatures.
- Leave the door partly open whenever using the oven to broil. This allows the oven to maintain proper temperatures.

1. Position rack.


Position rack so that the surface of the food is at least 3 inches (7 cm) away from the broil element. See "Broiling rack position chart" on page 16.

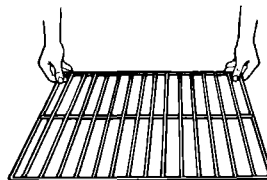

2. Put food on broiler pan and place in center of oven rack.


3. Position door.

Close the door to the Broil Stop position (open about 4 inches [10 cm]). The door will stay open by itself.

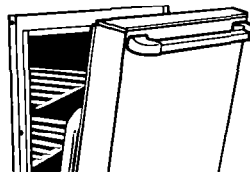


4. Set Oven Selector and Oven Temperature Control Knob to **BROIL**.

The OVEN HEATING Indicator Light will come on.

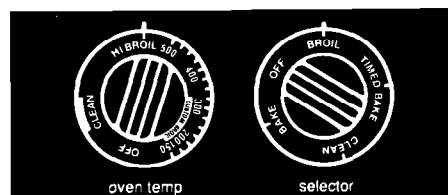

5. When broiling is done, turn off oven.

Turn both the Oven Selector and the Oven Temperature Control Knob to OFF. The OVEN HEATING Indicator Light will go off.

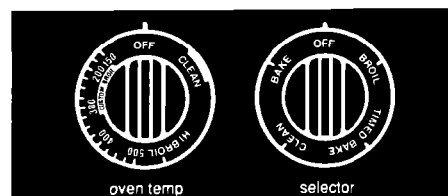

USING YOUR RANGE

To custom broil at a lower temperature:

- If food is cooking too fast, turn the Oven Temperature Control Knob **counterclockwise** until the OVEN HEATING Indicator Light goes off.



- If you want food to broil slower from the start, set the Oven Temperature Control Knob between 170°F and 325°F (77°C and 163°C).


Lower temperature settings allow the broil heating element to cycle and to slow cooking. The lower the temperature, the slower the cooking.



NOTE: Fish and chicken are some foods that may cook better if you use lower broiling temperatures.

Broiling rack position chart

RACK POSITION FROM BOTTOM	TYPE OF FOOD/ DONENESS
4	Hamburger patties and thin steaks, ½" thick or less
3	Quickly searing food, rare and medium steaks, medium patties, ham slices, fish steaks, frankfurters
2	Well-done steaks and patties, lamb chops, split chicken, pork steaks and chops, whole fish
1	Not used for broiling

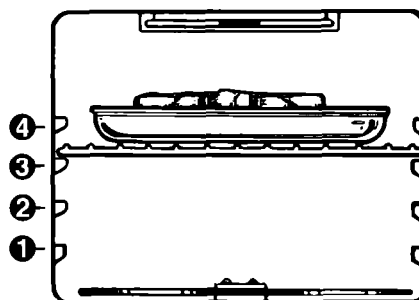

Broiling tips

- **Use** the broiler pan and grid for broiling. They are designed to drain excess liquid and grease away from the cooking surface to help prevent spatter, smoke, or fire.
- **Do not cover** the broiler grid with foil.
- **Place food** about 3" or more from the broil element.
- **To ensure** adequate grease drainage, do not use cookie sheets or similar pans for broiling.
- **After broiling, remove** the broiler pan from the oven when you remove the food. Drippings will bake on the pan if you leave it in the heated oven.

Energy saving tips

Although the energy used for cooking is usually a very small percentage of the total energy used in the home, cooking energy can be used efficiently. Here are some tips to help you save energy when using your cooking product:

- **Use** pans with flat bottoms, straight sides, and tight-fitting lids.
- **Match** the pan to the surface unit size.
- **Cook** with a minimum of liquid or fat to help shorten cooking time.
- **Preheat** pans only when recommended and for the shortest time possible.
- **Start** food on higher heat settings, then set surface unit control on LO or OFF to finish cooking. Use retained heat for cooking when possible.
- **Use** the more efficient surface units instead of the oven when possible.
- **Turn on** the surface unit only after placing filled pan on the unit.
- **"Oven peeking"** may cause heat loss, longer cooking times, and unsatisfactory baking results. Rely on your timer to keep track of the cooking time.
- **Bake** cakes, pies, or cookies when oven is warm. Best time to bake is right after a meal has been cooked in oven.
- **Preheat** the oven no longer than necessary.
- **Plan** your meals for the most efficient use of the range. When using the oven to cook one food, try to cook the rest of the meal in it also.
- **Do not preheat** when broiling, roasting, or cooking items such as casseroles.
- **Keep** reflector bowls clean for best heat reflection.

USING YOUR RANGE

Using the MEALTIMER™ clock

⚠ WARNING

Food Poisoning Hazard


Do not let food sit in oven more than one hour before or after cooking.

Failure to follow the above can result in death, food poisoning, or sickness.

The MEALTIMER clock is designed to turn the oven on and off at times you set, even when you are not around.

Delayed timed baking/roasting is ideal for foods which do not require a preheated oven, such as meats and casseroles. **Do not use the delayed time cycle for cakes, cookies, etc. – undercooking will result.**

Before using the MEALTIMER clock, make sure the clock is set to the correct time of day. (See “Setting the clock” on page 12.)

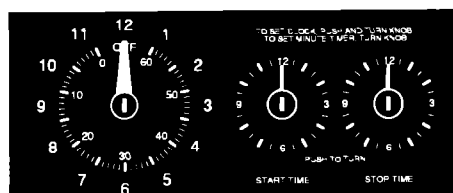


To delay start and stop automatically:

1. Position the oven rack(s) properly and place the food in the oven.




2. Push in and turn the Start Time Knob clockwise to the time you want baking/roasting to start.
3. Push in and turn the Stop Time Knob clockwise to the time you want the oven to shut off.

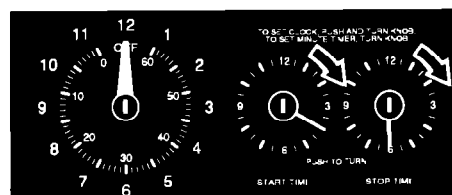


USING YOUR RANGE

- Set the Oven Selector to **TIMED BAKE** and set the Oven Temperature Control Knob to the **baking/roasting temperature you want**.

The oven will now start and stop automatically. The OVEN HEATING Indicator Light will come on when the start time is reached.

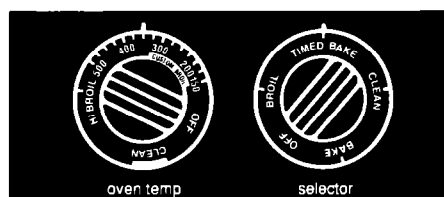


- After baking/roasting is done or to cancel the setting at any time, turn both the Oven Selector and Oven Temperature Control Knob to **OFF**.

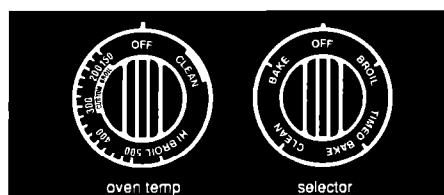

To start baking/roasting now and stop automatically:

- Position the oven rack(s) properly and place the food in the oven.

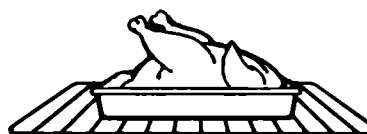


- Push in and turn the Stop Time Knob clockwise to the time you want the oven to shut off.


Make sure the Start Time Knob is not pushed in.



- Set the Oven Selector to **TIMED BAKE** and set the Oven Temperature Control Knob to the **baking/roasting temperature you want**.

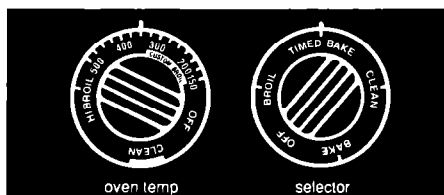


- After baking/roasting is done or to cancel the setting at any time, turn both the Oven Selector and Oven Temperature Control Knob to **OFF**.

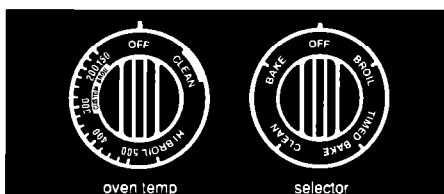

USING YOUR RANGE

The oven vent

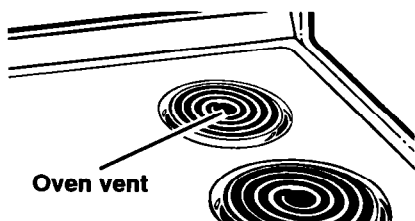

Hot air and moisture escape from the oven through a vent under the right rear surface unit. You can cook on the unit or keep food warm on it while the oven is on. The vent is needed for air circulation. **Do not block the vent.** Poor baking/roasting can result.

NOTE: Plastic utensils left over the vent can melt.

⚠ WARNING




Burn Hazard

Items left near the oven vent are hot.
Use pot holders when handling them.
Failure to do so can result in burns.

The storage drawer


You can remove the storage drawer to make it easier to clean under the range and to check for installation of the anti-tip floor bracket (if you have one). **Use care when handling the drawer.**

Removing the storage drawer:

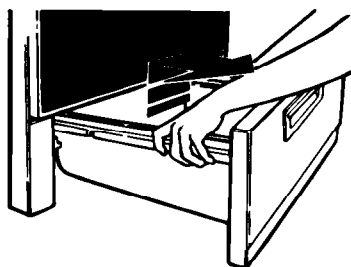

1. **Empty** drawer of any pots and pans before removing drawer. **Pull** drawer straight out to the first stop. **Lift** front and **pull out** to the second stop.
2. **Lift** back slightly and **slide** drawer all the way out.


Replacing the storage drawer:

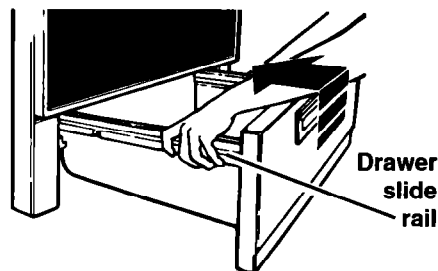

1. **Fit** ends of drawer slide rails into the drawer guides on both sides of opening.
2. **Lift** drawer front and **push in** until metal stops on drawer slide rails clear white stops on drawer guides. **Lift** drawer front again to clear second stop and **slide** drawer closed.

The anti-tip bracket

The range will not tip during normal use. However, tipping can occur if you apply too much force or weight to the open door without the anti-tip bracket properly secured.

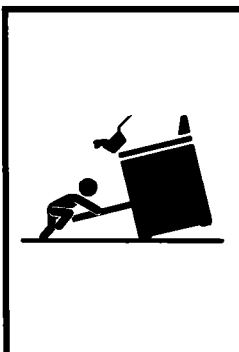


⚠ WARNING

Tip Over Hazard

- Connect anti-tip bracket to the range feet.
- Reconnect anti-tip bracket, if the range is moved.
- Do not push down on the open oven door.
- Follow the Installation Instructions.
- Do not let children climb onto the oven door.
- Failure to do so can result in death, burns, or injury.

To verify the anti-tip bracket is engaged (if you have a floor bracket):


- Remove the storage drawer. (See page 20.)

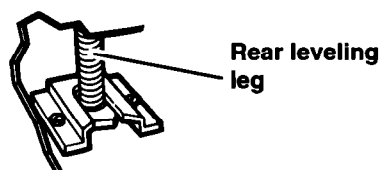

Floor bracket

- **Look** to see if the anti-tip bracket is attached to floor with screws.
- **Make sure** 1 rear leveling leg is positioned under the anti-tip bracket.
- **See** Installation Instructions for further details.

To verify the anti-tip bracket is engaged (if you have a wall bracket):

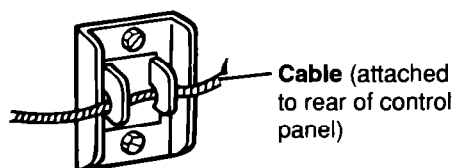

Wall bracket

- **Look** to see if the anti-tip bracket is attached with screws to the wall behind the control panel.
- **Make sure** the cable on the back of the range is secured by the 2 hooks on the bracket.
- **Cable** must be unhooked from wall bracket to move range for cleaning or service. Reconnect cable before using range.
- **See** Installation Instructions for further details.

Optional door panel pac


If you would like to change the color of your oven door glass to white or almond, you can order one of these kits from your Whirlpool Dealer. The kits include easy installation instructions.

- **White** (Kit No. 814069)
- **Almond** (Kit No. 814070)


continued on next page

Using the Self-Cleaning Cycle

The Self-Cleaning cycle saves you from the toil and mess that often come with hand-cleaning the oven interior. Like the other functions of your range, you operate the Self-Cleaning cycle with the easy-to-use electronic control. Please review the instructions in this section to keep your oven spotless.

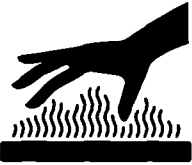	! WARNING
	Burn Hazard Do not touch the oven during the Self-Cleaning cycle. Keep children away from oven during the Self-Cleaning cycle. Do not use commercial oven cleaners in your oven. Failure to follow the above can result in burns, or illness from inhaling dangerous fumes.

Before you start

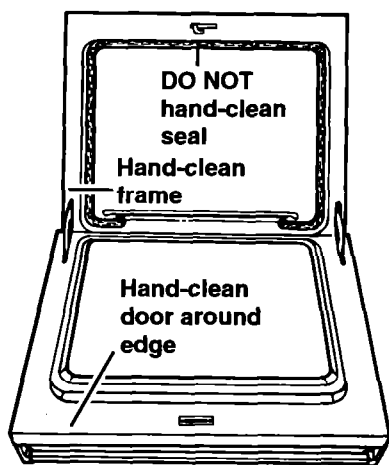

Before you start the Self-Cleaning cycle, make sure you:

- **Hand-clean the areas shown.** They do not get hot enough during the cleaning cycle for soil to burn away. Use hot water and detergent or a soapy steel-wool pad for cleaning.

NOTE: DO NOT clean, move, or bend the seal. Poor cleaning, baking, and roasting may result.

- **Remove the broiler pan and grid and any pots and pans** being stored in the oven.

NOTE: You can clean the broiler pan (without grid) in the oven if you have first removed most of the soil by hand-cleaning or in a dishwasher. If most of the soil is not removed, too much smoking will occur. The chrome broiler pan and grid will discolor if cleaned in the Self-Cleaning cycle.

- **Wipe out any loose soil or grease.**
This will help reduce smoke during the Self-Cleaning cycle.
- **Remove the oven racks from the oven if you want them to remain shiny.**
You can clean the oven racks in the Self-Cleaning cycle, but they will become harder to slide. (See page 29.) If you clean racks in the Self-Cleaning cycle, place them on the 2nd and 4th rack guides. (Guides are counted from bottom to top.)
- **Heat and odors** are normal during the Self-Cleaning cycle. Keep the kitchen well ventilated by opening a window or by turning on a vent hood or other kitchen vent during the cycle.

NOTES:


- **Do not force** the Lock Lever. You could bend or break it. The lever is designed to stay locked until the oven is cool enough to safely open. Wait until it moves freely.
- **Do not block** the vent during the Self-Cleaning cycle. Air must move freely for best cleaning results.
- **Do not leave** plastic utensils near the vent. They may melt.
- **Do not leave** any foil in the oven during the Self-Cleaning cycle. Foil could burn or melt and damage the oven surface.
- **The oven light** will not work during the Self-Cleaning cycle.

USING THE SELF-CLEANING CYCLE


Setting the controls

1. Move the Lock Lever to the right – the Clean position.


When the oven temperature goes above normal baking/roasting temperatures, the door cannot be opened and the Lock Lever must not be moved.

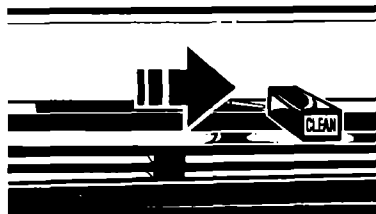

2. Set the Oven Selector and Oven Temperature Control Knob to CLEAN.

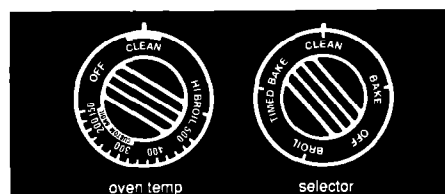

3. Make sure the clock and Start and Stop Times all have the correct time of day.

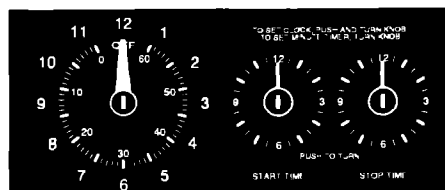


4. Push in and turn the Stop Time Knob clockwise 2 or 3 hours.

The OVEN HEATING Indicator Light will come on.


- Use 2 hours for light soil.
- Use 3 hours or more for moderate to heavy soil.

NOTE: Make sure the Start Time Knob is not pushed in.

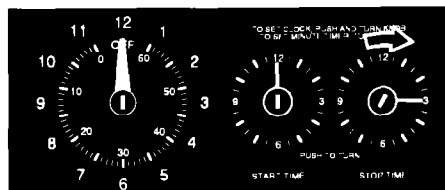

5. After the Self-Cleaning cycle is completed and the oven has cooled enough, the Lock Lever can be moved back to the left.

DO NOT FORCE the Lock Lever. Wait until it moves easily. Turn the Oven Selector and Oven Temperature Control Knob to OFF.

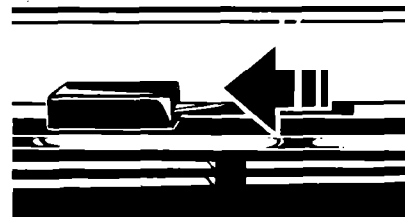

continued on next page


USING THE SELF-CLEANING CYCLE

6. After the oven is cool, wipe off any residue or ash with a damp cloth.


If needed, touch up spots with a soapy steel-wool pad.

To stop the Self-Cleaning cycle at any time:

1. Push in and turn the Stop Time Knob clockwise until it points to the correct time of day.

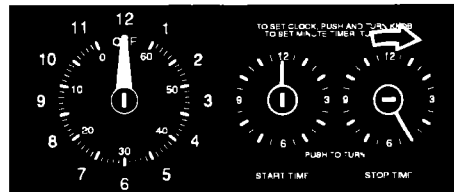


2. Turn the Oven Selector and Oven Temperature Control Knob to OFF.

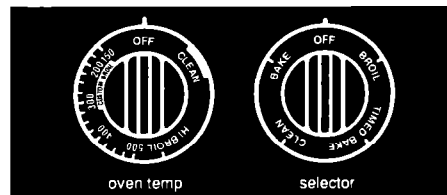

3. When the oven has cooled enough, move the Lock Lever back to the left.

DO NOT FORCE the Lock Lever. Wait until it moves easily.

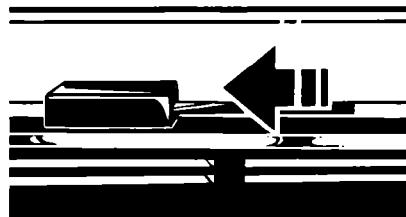

USING THE SELF-CLEANING CYCLE

Special tips


- **Keep** the kitchen well ventilated during the Self-Cleaning cycle to help get rid of heat, odors, and smoke.
- **After the oven is cool**, wipe up any residue or ash with a damp cloth or sponge. If any spots remain, clean with a mild abrasive cleanser or cleaning sponge.
- **Clean** the oven before it gets heavily soiled. Cleaning a very soiled oven takes longer and results in more smoke than usual.
- **If the Self-Cleaning cycle** does not get the oven as clean as you expected, the cycle may not have been set long enough or you may not have prepared the oven properly. Set the Self-Cleaning cycle longer the next time and hand-clean areas noted on page 22.

How the cycle works

The Self-Cleaning cycle uses very high heat to burn away soil and grease. During the cycle, the oven gets much hotter than it does for normal baking or broiling. This high heat breaks up the soil or grease and burns it away.

You can adjust the cycle time to the amount of soil in your oven. You can set the cycle anywhere between 2 and 4 hours. (See "Setting the controls" on page 23.)

The graph at the right is representative of a normal, 3½-hour Self-Cleaning cycle. Note that the heating stops ½ hour before the 3½-hour setting is up.

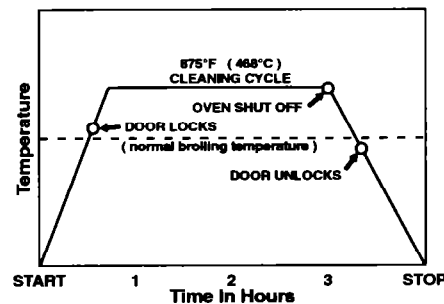


Caring for Your Range

Your range is designed for easy care. You can do most cleaning with items found around your home. Cleaning your range whenever spills or soiling occurs will help to keep it looking and operating like new.


NOTE: Let range cool before cleaning.

Surface units and reflector bowls


Removing

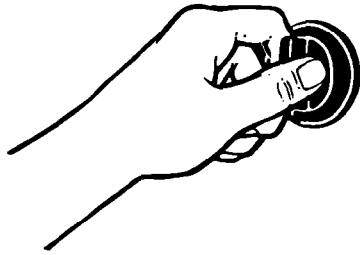


1. **Make sure** all surface units are off and cool before removing surface units and reflector bowls.

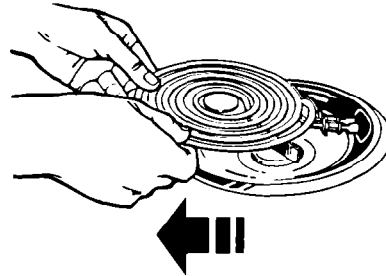

3. **Pull** the surface unit straight away from the receptacle.

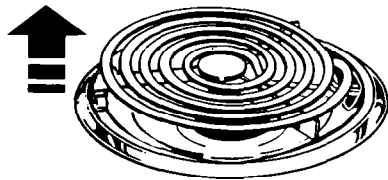


2. **Lift** the edge of the unit, opposite the receptacle, just enough to clear the element hold-down clip and the reflector bowl.

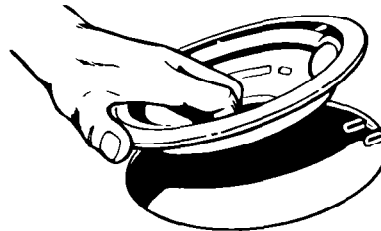


4. **Lift out** the reflector bowl. See "Cleaning chart" on page 29 for cleaning instructions.


Replacing

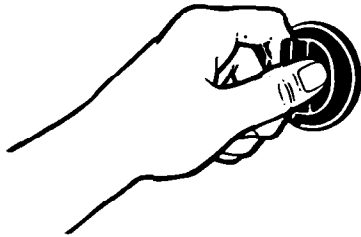


1. **Make sure** all surface units are off and cool before replacing surface units and reflector bowls.

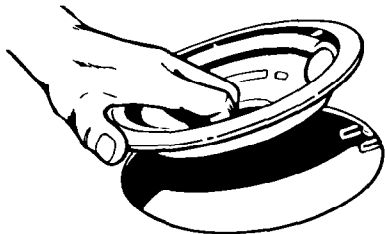

2. **Line up** openings in the reflector bowl with the surface unit receptacle and the element hold-down clip.

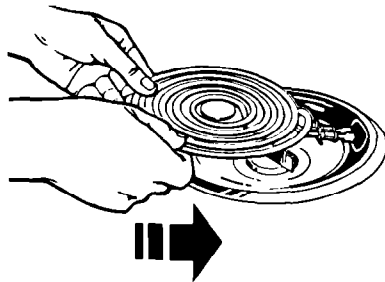

3. **Hold** the surface unit as level as possible with the terminal just started into the receptacle. **Push** the surface unit terminal into the receptacle.

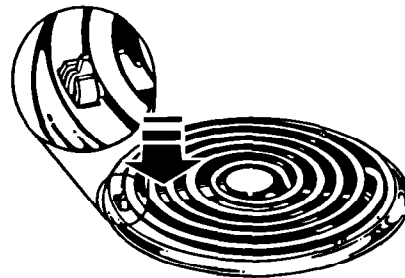


4. **When terminal is pushed into the receptacle as far as it will go, push down** the edge of the surface unit opposite the receptacle. The element hold-down clip will keep the surface unit from moving around.

NOTE: Reflector bowls reflect heat back to the utensils on the surface units. They also help catch spills. When they are kept clean, they reflect heat better and look new longer.

If a reflector bowl gets discolored, some of your utensils may not be flat enough, or some may be too large for the surface unit. In either case, some of the heat that's meant to go into or around a utensil goes down and heats the reflector bowl. This extra heat can discolor it.

CARING FOR YOUR RANGE

Lift-up cooktop

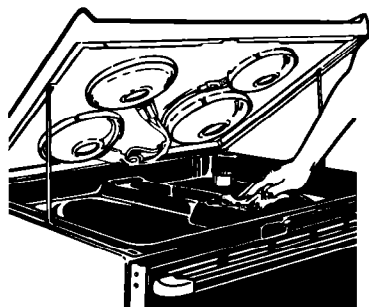

1. **Lift** front of cooktop at both front corners until the support rods lock into place.
2. **Wipe** with warm, soapy water. **Use** a soapy, steel-wool pad on heavily soiled areas.
3. **To lower the cooktop, lift** cooktop from both sides while pressing the support rods back to unlock them. **Lower** the cooktop into place.

NOTE: Do not drop the cooktop. Damage could result to the porcelain and the cooktop frame.

Cleaning chart

Use the following table to help you clean your range.

PART	WHAT TO USE	HOW TO CLEAN
Control knobs	Sponge and warm, soapy water	<ul style="list-style-type: none">• Turn knobs to OFF and pull straight away from control panel.• Wash, rinse, and dry thoroughly. Do not soak.• Do not use steel wool or abrasive cleansers. They may damage the finish of the knobs.• Replace knobs. Make sure all knobs point to OFF.
Control panel	Sponge and warm, soapy water OR Paper towel and spray glass cleaner	<ul style="list-style-type: none">• Wash, wipe with clean water, and dry thoroughly.• Do not use steel wool or abrasive cleansers. They may damage the finish.• Do not spray cleaner directly on panel. Apply cleaner to paper towel.


CARING FOR YOUR RANGE

PART	WHAT TO USE	HOW TO CLEAN
Exterior surfaces (other than control panel)	Sponge and warm, soapy water	<ul style="list-style-type: none"> • Wash, wipe with clean water, and dry thoroughly. • Use nonabrasive, plastic scrubbing pad on heavily soiled areas. • Do not use abrasive or harsh cleansers. They may damage the finish. <p>NOTE: Do not allow foods containing acids (such as vinegar, tomato, or lemon juice) to remain on surface. Acids may remove the glossy finish. Also wipe up milk or egg spills when cooktop is cool.</p>
Surface units	No cleaning required	<ul style="list-style-type: none"> • Spatters or spills will burn off. • Do not immerse in water.
Chrome reflector bowls	Warm, soapy water and a nonabrasive, plastic scrubbing pad	<ul style="list-style-type: none"> • Wash, rinse, and dry well. • Clean frequently. • Do not use abrasive or harsh cleansers. • Do not place in Self-Cleaning oven.
Broiler pan and grid (clean after each use)	Steel-wool pad and warm, soapy water	<ul style="list-style-type: none"> • Wash, rinse, and dry thoroughly. • Do not clean in Self-Cleaning cycle. (See note on page 22.)
Oven racks	Steel-wool pad and warm, soapy water OR The Self-Cleaning cycle	<ul style="list-style-type: none"> • Wash, rinse, and dry thoroughly. <p>OR</p> <ul style="list-style-type: none"> • Leave in oven during Self-Cleaning cycle. <p>NOTE: Racks will permanently discolor and become harder to slide if left in oven during Self-Cleaning cycle. Apply a small amount of vegetable oil to the side rungs to aid sliding.</p>
Oven door glass	Paper towel and spray glass cleaner OR warm, soapy water and a nonabrasive, plastic scrubbing pad	<ul style="list-style-type: none"> • Make sure oven is cool. • Follow directions provided with the cleaner. • Wash, wipe with clean water, and dry thoroughly.
Oven cavity	Self-Cleaning cycle	<ul style="list-style-type: none"> • See "Using the Self-Cleaning Cycle" on pages 22-25.

The oven light

The oven light will come on when you open the oven door. To turn the light on when the oven door is closed, use the Oven Light Switch on the control panel.


⚠ WARNING




Electrical Shock Hazard
Unplug oven before changing light bulb.
Replace light bulb cover before using the oven.
Failure to do so can result in death or electrical shock.

To replace the oven light:

1. **Unplug** appliance or **disconnect** at the main power supply.

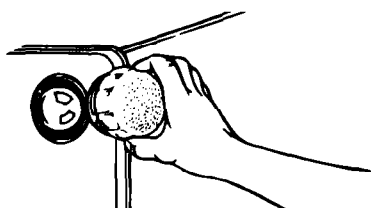

2. **Remove** the glass bulb cover in the back of the oven by screwing it out counter-clockwise.
3. **Remove** the light bulb from its socket. **Replace** the bulb with a 40-watt appliance bulb.

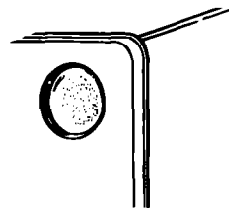


4. **Replace** the bulb cover by screwing it in clockwise. **Plug in** appliance or **reconnect** at the main power supply.

NOTE: The oven light will not work during the Self-Cleaning cycle.

Troubleshooting

Most cooking problems often are caused by little things you can find and fix without tools of any kind. Check the lists below and on the next page before calling for assistance or service. If you still need help, see "Requesting Assistance or Service" on page 33.

If nothing operates, check the following:

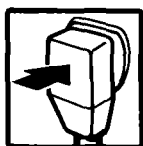

Is the range plugged into a live outlet with the proper voltage?
(See Installation Instructions.)



Have you blown a household fuse or tripped a circuit breaker?

Other possible problems and their causes:

PROBLEM	CAUSE
The oven will not operate	<ul style="list-style-type: none">• You have not turned the Oven Selector to BAKE or BROIL.• You have set a delayed start time. Wait for the start time to be reached or cancel and reset the control.• You have not turned the Oven Temperature Control Knob to a temperature setting.• You have not set the MEALTIMER™ clock correctly. (See "Using the MEALTIMER clock" on page 18.)• You have not set the MEALTIMER clock's Stop or Start Time Knobs to the correct time of day. If a delay start or stop is not desired, the Stop and Start Time Knobs must be turned to the correct time of day. Turn knobs till they pop out.
The surface units will not operate	<ul style="list-style-type: none">• You have blown a household fuse or tripped a circuit breaker.• The surface units are not plugged in all the way. (See "Replacing" on page 27.)• You have not set the control knobs correctly. Push control knobs in before turning to a setting.
Control knob(s) will not turn	<ul style="list-style-type: none">• You are not pushing in before turning.

continued on next page

TROUBLESHOOTING

PROBLEM	CAUSE
The Self-Cleaning cycle will not operate	<ul style="list-style-type: none"> • You have not set the Oven Selector and Oven Temperature Control Knob to CLEAN. • The range clock does not show the correct time of day. Reset clock. (See page 12.) • The Lock Lever is not in the CLEAN position – all the way to the right. • The Start Time Knob does not show the correct time of day or the knob is not all the way out. • The Stop Time Knob is not set ahead to the time you want the Self-Cleaning cycle to stop. See Step 3 in “Setting the controls” on page 23 for proper setting instructions.
Cooking results are not what you expected	<ul style="list-style-type: none"> • The range is not level. (See Installation Instructions.) • The oven temperature seems too low or too high. See “Adjusting the oven temperature control” on page 14 to adjust oven temperature. • You did not preheat the oven before baking (if called for in recipe). • The recipe you are using may need to be altered to improve the taste or appearance of the food. • You are using a pan that is not the correct type or size. Refer to a reliable cookbook or recipe for recommended pan type and size. • There is not enough air space around pan when baking. Allow 1½ to 2 inches (4-5 cm) of air space on all sides of pan. There must be a minimum space of 1 inch. • The cooking utensil is too large or too small for the surface unit being used. Pan should be the same size or slightly larger than the surface unit being used.

If none of these items was causing your problem, see “Requesting Assistance or Service” on page 33.

Requesting Assistance or Service

Before calling for assistance or service, please check "Troubleshooting" on pages 31-32. It may save you the cost of a service call. If you still need help, follow the instructions below.

1. If you need assistance* ...

Call Whirlpool Consumer Assistance



**Center telephone number.
Dial toll-free from anywhere
in the U.S.A.:**

1-800-253-1301

and talk with one of our trained consultants. The consultant can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

If you prefer, write to:

Mr. William Clark
Consumer Assistance Representative
Whirlpool Corporation
2000 North M-63
Benton Harbor, MI 49022-2692

Please include a daytime phone number in your correspondence.

2. If you need service*...

Whirlpool has a nationwide network of



authorized Whirlpool service companies. Whirlpool service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. To locate the authorized Whirlpool service company in your area, call our Consumer Assistance Center telephone number (see Step 1) or look in your telephone directory Yellow Pages under:

• **APPLIANCE-HOUSEHOLD-
MAJOR, SERVICE & REPAIR**

- See: Whirlpool Appliances or
Authorized Whirlpool Service
(Example: XYZ Service Co.)

• **WASHING MACHINES &
DRYERS, SERVICE & REPAIR**

- See: Whirlpool Appliances or
Authorized Whirlpool Service
(Example: XYZ Service Co.)

3. If you need FSP® replacement parts ...

FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your ESTATE® appliance. FSP replacement parts will fit right and work right, because they are made to the same exacting specifications used to build every new ESTATE appliance.

To locate FSP replacement parts in your area, refer to Step 2 or call the Whirlpool Consumer Assistance Center number in Step 1.

4. If you are not satisfied with how the problem was solved ...

- Contact the Major Appliance Consumer Action Program (MACAP). MACAP is a group of independent consumer experts that voices consumer views at the highest levels of the major appliance industry.
- Contact MACAP only when the dealer, authorized servicer, and Whirlpool have failed to resolve your problem.

Major Appliance Consumer Action Program
20 North Wacker Drive
Chicago, IL 60606

- MACAP will in turn inform us of your action.

* When asking for help or service:

Please provide a detailed description of the problem, your appliance's complete model and serial numbers, and the purchase date. (See page 3.) This information will help us respond properly to your request.

Index

This index is alphabetical. It contains all the topics included in this manual, along with the page(s) on which you can find each topic.

TOPIC	PAGE	TOPIC	PAGE
ANTI-TIP BRACKET	21	MEALTIMER™ CLOCK	18
ASSISTANCE	33	Delaying start and stop	
BAKING		automatically	18
Aluminum foil	11	Starting now and stopping	
Pans	10	automatically	19
Racks	10	MINUTE TIMER	12
Setting cycle	13	MODEL AND SERIAL NUMBER	3
BROILING		OPTIONAL DOOR PANEL PAC	21
Broil stop position	15	OVEN TEMPERATURE	
Broiling rack position chart	16	Adjusting	14
Grid	17	Setting	13, 15, 19
Pan	15, 17	OVEN VENT	20
Setting cycle	15	PANS	9-10
Tips	17	PARTS	7
CANNING KIT	10	RACKS	10
CLEANING		ROASTING	
Broiler pan and grid	29	Pans	10
Control knobs	28	Racks	10
Control panel	28	Setting cycle	13
Exterior surfaces	29	SAFETY	4-6
Oven cavity	29	SELF-CLEANING	
Oven door glass	29	How cycle works	25
Oven racks	29	Preparing oven	22
Reflector bowls	29	Setting controls	23
Surface units	29	Stopping cycle	24
Under the cooktop	28	Tips	25
CLOCK	12	SERVICE	33
CONTROL KNOBS	8, 28	STORAGE DRAWER	
COOKTOP		Removing	20
Cleaning	28, 29	Replacing	20
Using	8-10	SURFACE UNITS	
COOKWARE		Coil elements	8, 26, 29
Canning	9	Control knobs	7, 23
Tips	9	Control setting guide	8
ENERGY SAVING TIPS	17	Oven heating indicator light	13, 15
FEATURES	7	Reflector bowls	26, 27, 29
LIFT-UP COOKTOP	28	Surface heating indicator light	8
LIGHT	30	Surface unit markers	8
LOCK LEVER	23-24	TROUBLESHOOTING	31
		WARRANTY	36

ESTATE[®] Electric Range Warranty

LENGTH OF WARRANTY	WHIRLPOOL WILL PAY FOR
FULL ONE-YEAR WARRANTY From Date of Purchase	FSP [®] replacement parts and repair labor to correct defects in materials or workmanship. Service must be provided by an authorized Whirlpool service company.
WHIRLPOOL WILL NOT PAY FOR	
<p>A. Service calls to:</p> <ol style="list-style-type: none"> 1. Correct the installation of your range. 2. Instruct you how to use your range. 3. Replace house fuses or correct house wiring. 4. Replace owner-accessible light bulbs. <p>B. Repairs when your range is used in other than normal, single-family household use.</p> <p>C. Pickup and delivery. Your range is designed to be repaired in the home.</p> <p>D. Damage to your range caused by accident, misuse, fire, flood, acts of God, or use of products not approved by Whirlpool.</p> <p>E. Repairs to parts or systems caused by unauthorized modifications made to the appliance.</p>	

7/95

WHIRLPOOL CORPORATION SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Outside the United States, a different warranty may apply. For details, please contact your authorized Whirlpool dealer.

If you need service, first see the "Troubleshooting" section of this book. After checking "Troubleshooting," additional help can be found by checking the "Requesting Assistance or Service" section, or by calling our Consumer Assistance Center telephone number, **1-800-253-1301**, from anywhere in the U.S.A.